



Sharedband Bonded Broadband

Sharedband Power Router 1 Configuration Guide

Introduction

This document is to instruct you how to configure the Sharedband software on Sharedband Power Router 1.

Note: This guide assumes that the Router is not pre-configured.

Preparation

Make sure you have the Sharedband user details for the Community you wish to setup.

The Procedure

Do not skip any of the steps, as the configuration is not activated until **'Save and reboot'** is selected at the end of the last step.

Step 1: Log onto the Web interface of the router (default address <http://192.168.3.17>). The default login is 'admin' and password 'Bonding123'.

Step 2: Click '**Settings**' > '**Sharedband Service Configuration**'.



Step 3: You should now be presented with a screen like this:




The screenshot shows the 'Sharedband Service Configuration' page. At the top left is the Sharedband logo with the tagline 'Faster Broadband Today'. On the right is a decorative green wave graphic. The page title is 'Sharedband Service Configuration'. On the left is a navigation menu with links: 'Main Menu', '> Settings', 'Status', 'Diagnostics', 'Contact Us', and 'Log Out'. The main form contains the following fields: 'Your Username' (text input with 'username'), 'Your Password' (text input with 'password'), 'Community ID number' (text input with '3 digit number'), 'Aggregation Server IP Address' (four text inputs each with 'XX'), and 'Node ID' (dropdown menu with 'X'). At the bottom are 'Save' and 'Save and reboot' buttons.

The details required for this screen are those generated when creating the user on the Sharedband NOC. The only value which differs is the 'Node ID' (1 – 8 depending on the Router number) for your WAN Ethernet connection.

Once completed click '**Save**', and proceed to the next step.

Step 4: Verify the WAN configuration details for the connection that will be in use. Click '**Settings**', then work through both '**WAN connection setup (Ethernet)**' screen. The screen will look like the following:

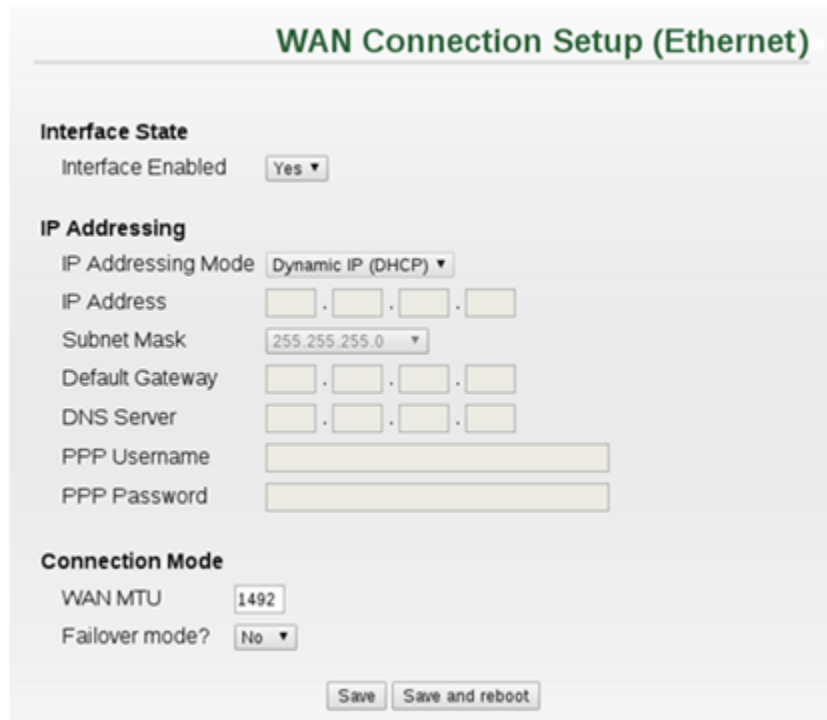

The screenshot shows the 'WAN Connection Setup (Ethernet)' page. The title is 'WAN Connection Setup (Ethernet)'. Under 'Interface State', 'Interface Enabled' is set to 'Yes'. Under 'IP Addressing', 'IP Addressing Mode' is 'Dynamic IP (DHCP)'. There are input fields for 'IP Address', 'Subnet Mask' (set to '255.255.255.0'), 'Default Gateway', and 'DNS Server'. There are also input fields for 'PPP Username' and 'PPP Password'. Under 'Connection Mode', 'WAN MTU' is '1492' and 'Failover mode?' is 'No'. At the bottom are 'Save' and 'Save and reboot' buttons.

For many setups the default addressing mode of '**Dynamic IP (DHCP)**' will be suitable, but the device allows configuration of '**Static IP**' and '**PPPoE**' options if needed.

Once completed click '**Save**', and proceed to the next step.

Step 5: You will need to change the LAN IP of the router, which you will find under '**Settings**' > '**LAN settings**'. This is normally set to 192.168.3.X (X being the node number). The recommendation is to increment the last digit for each Sharedband router, for example the second unit would have an address of 192.168.3.2.

LAN Settings

Router LAN IP Address: 192 . 168 . 3 . X

Subnet Mask: 255.255.255.0

Enable DHCP server?: Yes

DHCP Address Range From: 192 . 168 . 3 . 100

DHCP Address Range To: 192 . 168 . 3 . 199

VRRP Gateway IP Address: 192 . 168 . 3 . 250

VRRP Subnet Mask: 255.255.255.0

Save Save and reboot

This is also where you can change the VRRP Address and Subnet for routed mode, this must be the same on all routers (for more information on routed mode, please contact support).

For the change to take effect, the router will need to be rebooted by clicking the '**Save and reboot**' button.